 
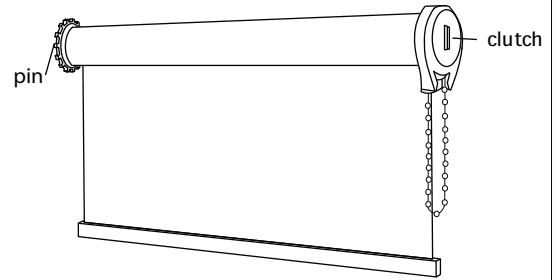 


## ELITE CHAIN ROLLER FITTING INSTRUCTIONS

Your blind will be supplied with the appropriate brackets and screws.

 
### 1. Fixings

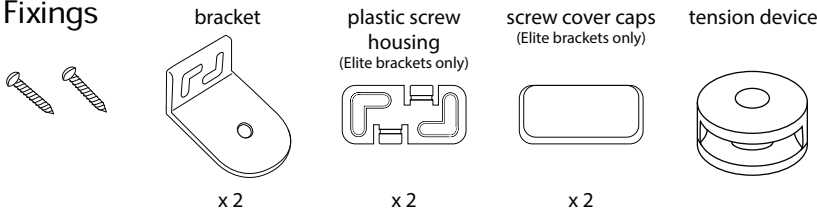


### 2. Fixing your brackets

Blinds will be supplied according to your order with left or right hand control. The brackets are universal so the clutch can be mounted either side

inside recess

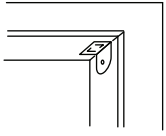


outside recess


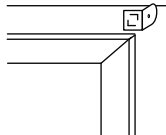 


Measure and mark drilling positions

 To the ceiling or the top of the window frame i.e. top fix

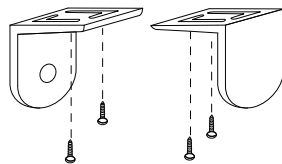

 
 
To the wall or the front of the window moulding i.e. face fix

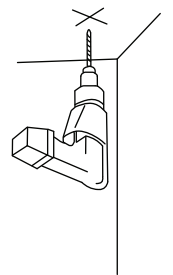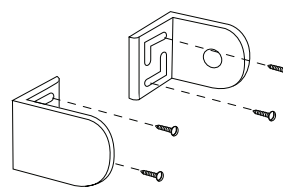



Drill and plug holes and screw brackets into position.

### 3. Installing your blind

  Before fitting the blind into the brackets ensure the retractable pin is fully retracted into the pin end mechanism. Then insert the clutch end pin into the bracket ensuring the the bottom of the clutch is pointing down, once this is inserted rotate the cog (positioned at the opposite end to the the clutch) to release the retractable pin into the bracket, the blind should now be secure. Now fit the screw cover caps over the plastic screw housings. Finally fit the Chain tension device as per the instructions below.

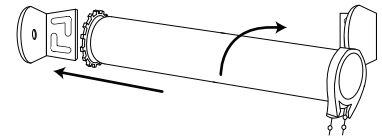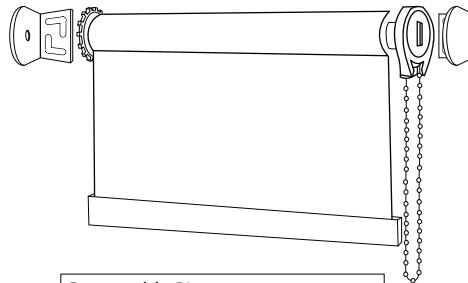


Retractable Pin

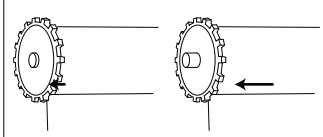  

### 4. Installing the tension device

This tension device reduces the the hazards of strangulation and entanglement of young children by limiting access to the control chain. Fit the tension device as per the diagrams below.

 Please ensure you fit this Tension Device at the maximum vertical distance from the control mechanism to prevent the chain from becoming slack.

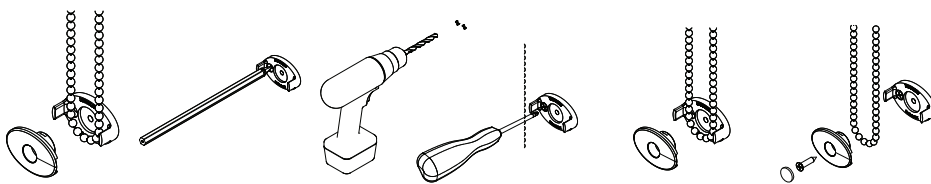

### 5. Use of the control chain to operate your blind

Pulling gently on the chain in one direction raises the blind, pulling it in the other direction lowers it. On blinds where the fabric rolls towards the window, the front of the chain does the rise. On blinds where the fabric rolls towards the room the rear does the raising.

## WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.

