

 
 
Bottom-up Roller Blind Fitting Instructions

4. Cording the blind (for right hand controlled blinds)

The blind will come with the pull cords attached to the blind within the knotholders. To cord up the blind pass the left hand cord through the left hand pulley and across and through the Right Hand pulley. once this is though connect to one half of the cord breakaway device as per diagram 1. Then pass the right hand cord through the right hand pulley and connect to the other half of the break away device. Now clip the two halves together, see diagram 2, now you should be able to pull the blind up and down. If the blind is not level when it goes up and down alter the cord lengths by moving the position of the knot within the breakaway device.

Cording the blind (for LH controlled blinds).

Follow the instructions for a right hand blind but cord the blind in the opposite direction, Replacing the word left with right and vice versa.

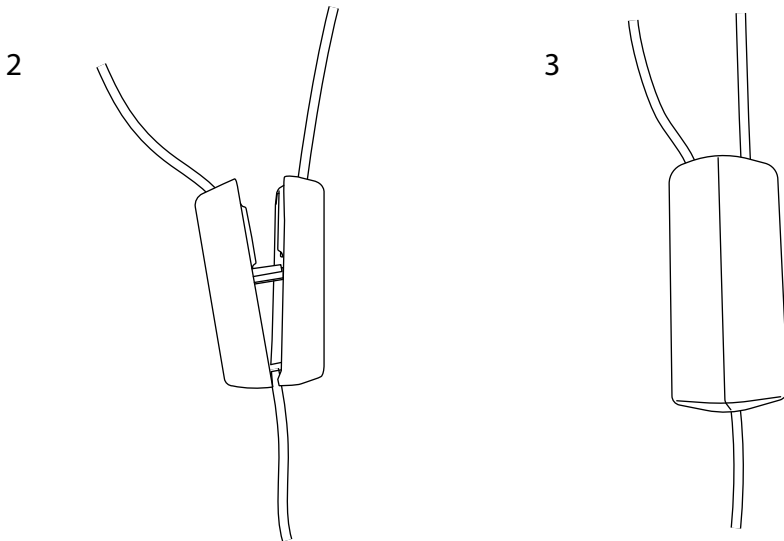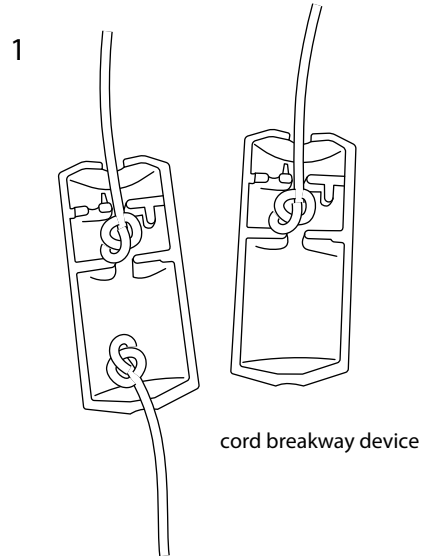

5. To re-tension the blind (should not be necessary)

The spring in the headbox should already be tensioned. If adjustment is required, follow these instructions.

If the blind rolls down too quickly, remove the cassette end cap and you will see a hole in the centre of the bracket with a cross in a plastic pin use a screwdriver in an anti clockwise direction to decrease the tension. If the blind rolls down too slowly or not far enough, press and turn the screw in a clockwise direction.

! WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.

